
SOLAR ROTATING LIGHT

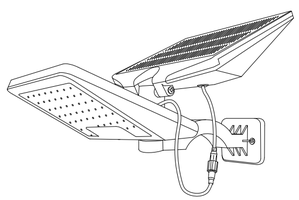


User Manual

SPECIFICATIONS


Solar Panel	5V 4.0W
LED	6W
Battery	3.2V, 6000mAh (≥2,000 times charge&discharge)
Charging Time	8 hours
Working Time	16 hours (when fully charged)
Mode	Constant on
Luminous Flux	800lm
Waterproof Rating	IP65
Working Temperature	-4 ℉~140 ℉ (-20 ℃~60 ℃)
Materials	Solar Panel: Polycrystalline Silicone Casing/Mounting bracket: ABS, PC Extension cord: PVC
Certificate	CE, RoHS, FCC


IMPORTANT TIPS


Upon receipt of the solar light, please follow below steps to test:
1, Connect the wire from the solar panel and that from the LED lamp.
2, Cover the solar panel and check if the LEDs light up. If not, please charge it in direct sunlight for 10 hours and check again.

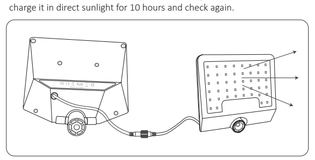

PACKAGE INCLUDES(1 Pack)


Solar Panel x 1


LED Panel x 1


Mounting bracket x 2


M8*50 screw x 1



M8*25 screw x 2


M8 nuts x 2


Mounting Screw x 4



Plastic anchor x4


Screw PWA4*32 x 2



Extension cable(10ft)x1

Note: Please check inside the package upon receipt. If you find any parts missing or defective, please contact our customer service team for assistance.


INTEGRATED INSTALLATION

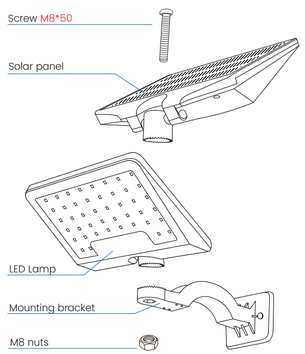


Connect the cord




Mounting on a wall



SPLIT INSTALLATION

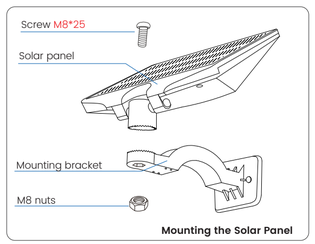


Mounting the Solar Panel

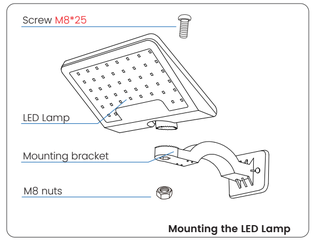


Mounting the LED Lamp


SPLIT INSTALLATION(On Roof-Top)

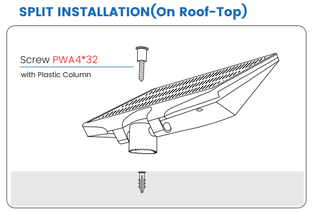

180° **Vertical Rotation**

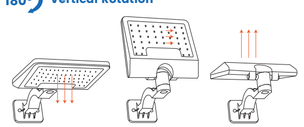


150° **Horizontal Rotation**

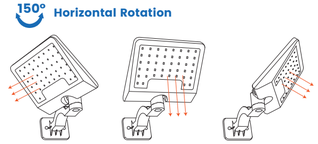

可旋转太阳能灯

SOLAR ROTATING LIGHT

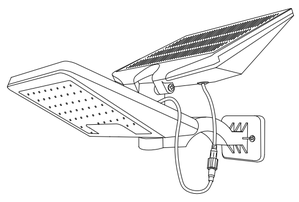


使用说明书

产品参数


太阳能板	5V 4.0W
LED灯	6W
电池	3.2V, 6000mAh (≥2,000 次充放电)
充电时长	8 个小时
亮灯时长	16 个小时 (在满电的情况下)
工作模式	晚上自动亮灯，早上自动关灯
光通量	800流明
防水等级	IP65
工作温度	-20℃~60℃
材质	太阳能板: 多晶硅 外壳/安装支架: ABS+PC合金料 延长线: 铜线PVC皮
认证	CE, RoHS, FCC


友情提示


收到太阳能灯后，请按照以下步骤进行测试：
1、连接太阳能板的电线和LED灯的电线。
2、在桌面上反过来盖上太阳能板，检查LED灯是否亮起，如果没有，请在阳光照射下充电10小时，然后再次检查。

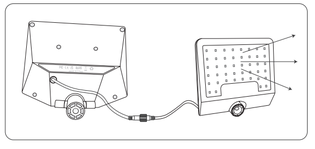

产品展示


太阳能板 x 1


LED 灯x 1


安装支臂 x 2


M8*50 螺丝 x 1



M8*25 螺丝x 2


M8 螺母 x 2


安装螺丝 x 4



膨胀胶塞 x4


螺丝PWA4*32 x 2



延长线(3米)x1

注意：收到包裹后，请检查包裹内各种配件是否齐全。如果您发现任何零件丢失或有缺陷，请联系我们的客户服务团队提供帮助。

一体化安装示意图

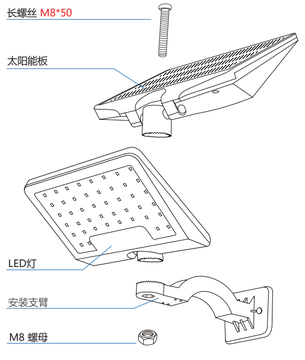


连接电线公母插




安装到墙上



分体安装示意图

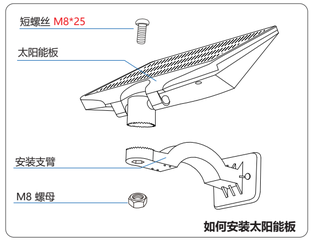


如何安装太阳能板

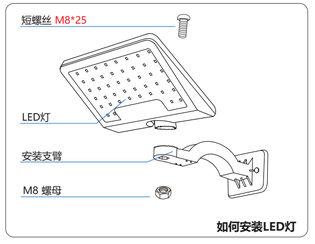


如何安装LED灯

分体安装示意图（安装在屋顶）

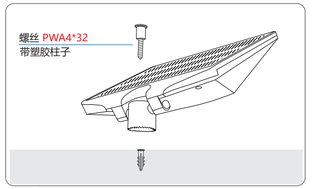

180° 可垂直旋转（放松侧边2颗小螺丝后调节）

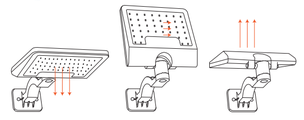

150° 可水平旋转（放松中间M8大螺丝后调节）

